

Most standard i³ Compact DVR/NVR units (except Pro Lite units) can accept two extra storage hard drives without having to open the unit cover. Please use i³-approved hard drives **only**, see the list below. Using regular hard drives in the DVR/NVR application will cause the system to overheat, system crash may also occur as a result.

REMEMBER:

- · Handle hard drives with care
- Do not subject the drive(s) to any physical shock
- Always ground yourself before handling hard drives.
- · Static shock on any electronic device may damage any component.

List of i³-approved SATA hard drives:

- WD1003FBYX (Western Digital 1TB RE4)
- WD2003FYYS (Western Digital 2TB RE4)
- I-ST3160318AS (Seagate 160GB Surveillance)
- I-ST3320620AS (Seagate 320GB Surveillance)
- I-ST3320620SV (Seagate 320GB Surveillance)
 - 6205V (Seagate 320GB Surveilla
- I-ST3500630SV (Seagate 500GB Surveillance)
 I-ST3750330SV (Seagate 750GB Surveillance)
- I-ST3750640SV (Seagate 750GB Surveillance
- I-ST31000340SV (Seagate 1TB Surveillance)
- I-ST31000525SV (Seagate 1TB Surveillance)
- I-ST31000526SV (Seagate 1TB Surveillance)
 I-ST31000526SV (Seagate 1TB Surveillance)

Parts needed:

i³ approved hard drive(s) Philips screwdriver

Step 1.



Shut down the DVR/NVR, unplug the power.

Step 3.



Open the unit door and locate the hard drive bay. All three hard drive slots should be locked. This is indicated by the red dot on each respective HDD slot.

The system OS drive is *always* on the bottom. *Never* attempt to remove the OS drive, while the unit is running.

Step 2.



Switch the power switch on the Power Supply to the OFF position.

Step 4.

Use the plastic key included in your accessories box or a pointed object, such as a screwdriver or a pen to unlock one of the top two hard drive bays. Push the sliding tab to the bottom, covering the red dot. The bay will be unlocked.

With your finger, lift the hard drive bay tab until the hard drive bay pops open and the door swings out and to the right.

Ground yourself. Do not handle hard drives without wearing the antistatic wrist strap. Static electricity may damage the unit and/or the new hard drive. Any such damage through user negligence is not covered by the unit warranty.

i³ INTERNATIONAL TECHNICAL BULLETIN Technical Bulletin # 121206-HW-01





Step 4.



Position the new hard drive face up and with the connectors facing away from you and to the inside of the DVR/NVR unit.

Carefully but firmly slide the new hard drive all the way inside the unit and close the hard drive bay door.

Use the provided plastic key or a pointed object to re-lock the hard drive bay by sliding the tab to the top exposing the red dot.

Step 5.

Connect the power to the unit and return the power switch on the back of the power supply back into the ON position.

If the unit does not power ON automatically, use the power switch on the front of the unit to power the unit ON.



Now that the additional drive has been added to the system, it needs to be partitioned in accordance with i³ standards.

Partitioning a Hard Drive in Windows 7

- Turn the DVR/NVR ON and wait for the Windows OS and the SRX-Pro Server to load. Then log into the SRX-Pro Server as a master user and press Alt + Shift + Ctrl + F4 on your keyboard to exit SRX-Pro Server and access the Desktop.
- 2. Click the START button on the bottom left corner.
- 3. Right-click on **My Computer** and select **Manage** from the context menu. Computer Management window will be displayed.





4. In the left pane, select Disk Management. In the right pane, the system physical drives are displayed. The newly installed hard drive will be marked "Unallocated". Please ensure that the unallocated drive is identified as BASIC, not Dynamic*.

🏭 Computer Management										
File Action View Help										
🗢 🔿 🖄 📰 🚺	ef 😼									
🛃 Computer Management (Local)	Volume Layout	Type File System	Status			Capacity	Free Space	% Free	Fault Tolerance	Overhead
🖃 👔 System Tools	🗔 (C:) Simple	Basic NTFS	Healthy (Sys	stem, Boot, Page File, Active, F	Primary Partition)	19.53 GB	9.82 GB	50 %	No	0%
Task Scheduler	📼 (D:) Simple	Basic NTFS	Healthy (Log	gical Drive)		24.41 GB	22.49 GB	92 %	No	0%
Iso Event Viewer	📼 (E:) Simple	Basic NTFS	Healthy (Log	jical Drive)		443.7	443.68 GB	100 %	No	0%
	📼 (F:) Simple	Basic NTFS	Healthy (Log	gical Drive)		443.7	443.68 GB	100 %	No	0%
Reformance										
🚠 Device Manager										
🖃 🔄 Storage										
Disk Management										
Employee and Applications										
	biasc (C:) (D:) (E:) (F:) 931.51 GB 19.33 GB NTF5 24.41 GB NTF5 443.78 GB NTF5 443.78 GB NTF5						GB NTFS			
	Online	Healthy (System,	Boot, Page	Healthy (Logical Drive)	Healthy (Logic	al Drive):		Healthy	(Logical Drive)	
		<u> </u>						<u> </u>		
	Disk 1 Basic 931.39 GB Online							,,,,,,,		
		(001 00 CP	New Si	imple Volume						
		Unallocated	New S	panned Volume						
		New Striped Volume								
	Disk 2		New R	AID-5 Volume						
	Basic									
	931.39 GB	931.39 GB	Proper	ties						
Chine	Crimite			Help						
		Primary partiti	on S Exten	ded partition a Free space	re 📕 Logical di	ive				

* If the drive is identified as Dynamic, right-click and select Convert to Basic Disk... from the context menu.

- 5. In the right pane, right-click on the unallocated drive and select **New Simple Volume...** in the context menu. The New Simple Volume Wizard will initialize.
- 6. Click Next.
- 7. Specify the Volume Size. To calculate the size of the new volume, divide the hard drive's Maximum disk space by two or four, depending on the number of volumes desired. Enter the value in the field **Simple volume size in MB**. Click **Next**.
- 8. Assign a Drive Letter or Path. Select the desired drive letter in the drop-down list. Click Next.

New Carela Balance (Barand	v
Format Partition To store data on this partition, you must format it first.	
Choose whether you want to format this volume, and if so, what settings you want to use.	
C Do not format this volume	
• Format this volume with the following settings:	
Eile system: NTFS	
Allocation unit size: Default	
⊻olume label:	
Perform a quick format	
Enable file and folder compression	
< Back Next > Cancel	1

i³ INTERNATIONAL TECHNICAL BULLETIN Technical Bulletin # 121206-HW-01





- 9. The wizard will now prompt you to format the partition. Ensure that Format this volume with the following settings: is checked. The File system: drop-down should read NTFS, and the Allocation unit size: should have Default selected. Volume label is optional. Click Next to continue.
- **10.** The wizard now displays a summary of all the configured settings. Click **Finish** to confirm the settings and finish the New Simple Volume Wizard.
- **11.** Repeat steps 5-10 until new drive has been partitioned into 2 or 4 equal partitions, depending on user preference. The drive letters of all partitions should form an uninterrupted sequence (i.e. G,H,I,J). See image below.

🛃 Computer Management										_ 8 ×	
File Action View Help											
🗢 🔿 🖄 📅 🛛 😰 🛛	1										
🛃 Computer Management (Local)	Volume Layout	Type File System	Status			Capacity	Free Space	% Free	Fault Tolerance	Overhead	
🖃 🎁 System Tools	📼 (C:) Simple	Basic NTFS	Healthy (Sy	stem, Boot, Page File, Active, Pri	imary Partition)	19.53 GB	9.82 GB	50 %	No	0%	
🕀 🕑 Task Scheduler	📼 (D:) Simple	Basic NTFS	Healthy (Lo	gical Drive)		24.41 GB	22.49 GB	92 %	No	0%	
Event Viewer	📼 (E:) Simple	Basic NTFS	Healthy (Lo	gical Drive)		443.78 GB	443.78 GB	100 %	No	0%	
1 1 1 Shared Folders	📼 (F:) Simple	Basic NTFS	Healthy (Lo	igical Drive)		443.78 GB	443.78 GB	100 %	No	0%	
Berformance	📼 (G:) Simple	Basic NTFS	Healthy (Lo	igical Drive)		448.66 GB	448.66 GB	99 %	No	0%	
Device Manager	📼 (H:) Simple	Basic NTFS	Healthy (Lo	igical Drive)		448.66 GB	448.66 GB	99 %	No	0%	
	📼 (I:) Simple	Basic NTFS	Healthy (Lo	ogical Drive)		448.66 GB	448.66 GB	99 %	No	0%	
Disk Management	📼 (J:) Simple	Basic NTFS	Healthy (Lo	igical Drive)		448.66 GB	448.66 GB	99 %	No	0%	
🗉 🚠 Services and Applications											
	Basic (C:) (D:) (E:) (F:)										
	931.51 GB Online	19.53 GB NTFS Healthy (System,	19.53 GB NTF5 Healthy (System, Boot, Page Healthy (Logical Drive) Healthy (Logical Drive)				TFS 443,78 GB NTFS ical Drive) Healthy (Logical Drive)				
	Basic	(6)	(G:) 448.66 GB NTFS Healthy Ht				(+;) 48.66 GB NTFS ealthy				
	931.39 GB Online	448.66 GB NTFS Healthy									
						·					
	Disk 2										
	931.39 GB Online	(I:) 448.66 GB NTF: Healthy	(I:) 448.66 GB NTFS Healthy				(1:) 48.66 GB NTFS lealthy				
	Unallocated	Primary partiti	ion 📕 Exte	nded partition 📒 Free space	e 🗧 Logical di	rive					
-											

This completes the new hard drive configuration. Restart SRX-Pro Server, go to Setup -> Storage Setup and allocate all new partitions for video recording.

Please contact technical support at <u>support@i3international.com</u> or by phone: 1.877.877.7241 if you have any questions or issues.

i³ International Inc. Technical Support and Services 1.877.877.7241 support@i3international.com

> i³ INTERNATIONAL TECHNICAL BULLETIN Technical Bulletin # 121206-HW-01