

Re: Flip video image on AX32-series cameras

To all of our customers and partners;


This bulletin is a set of instructions for the users of AX32-series wedge cameras. Once your wedge camera is installed, you may find that the image must be “flipped” upside-down for proper display. Follow instructions below to rotate video image of your AX32-series camera 180°.

1. Start by connecting to your AX32V2M2/4 or AX32VD14 camera through the Internet Explorer.
2. Enter the camera's IP address in the Address bar. Default IP address for AX32-series of cameras is 192.0.0.16. You will be prompted to enter login/password. Default login is “admin”, default password is “1234”.
Note: Make sure that your PC is on the same network as the AX32-series camera you are trying to connect to.
3. Once you have successfully connected to the IP camera, a graphic user interface with the video stream will be displayed (see example below).
4. In order to rotate the image 180° (flip the image), click the double-arrow icon on the left-hand side control panel.




(Picture 1)

5. The image will be rotated 180° (Picture 2).

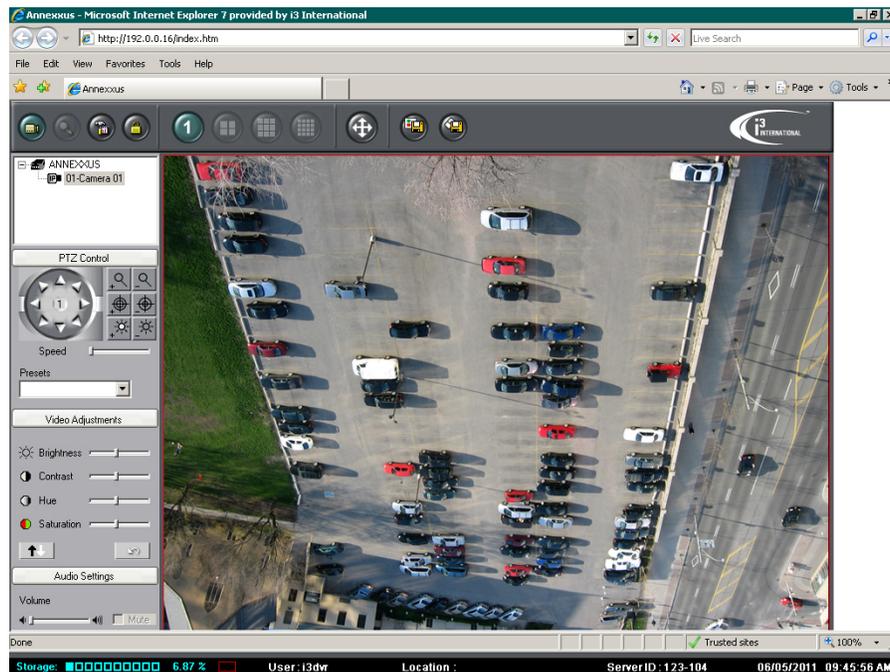

Picture 1. Before flipping the image



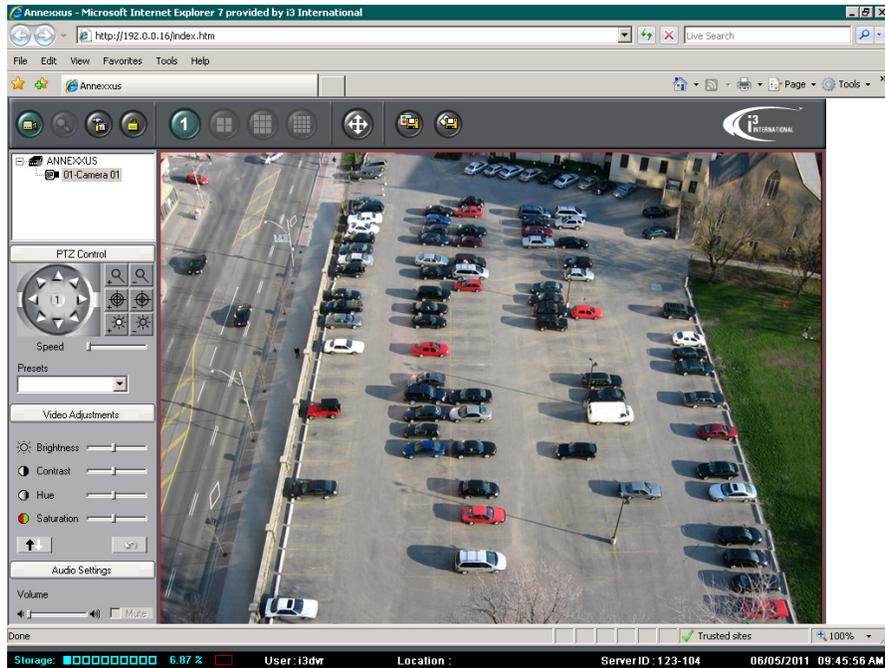

Picture 2. After flipping the image

Please contact technical support at support@i3international.com or by phone: 1.877.877.7241 if you have any questions or issues.

i³ International Inc.
Technical Support and Services
1.877.877.7241
support@i3international.com